



IGNITION SWITCH		STARTER SWITCH		ENGINE STOP SWITCH		TURN SIGNAL SWITCH		DIMMER SWITCH		HORN SWITCH											
BAT1	IG	TL1	TL2	PA	HL1	HL2	IC	ST	IG	BAT2	W	R	L	PL	PR	PL	HL2	Lo	H	Ho	BAT3
OFF					FREE			OFF			R						Lo			FREE	
ON					PUSH			RUN			N						(N)			PUSH	
P								OFF			L						H				